




ASPHALT AND CONCRETE • GENERAL CONTRACTORS

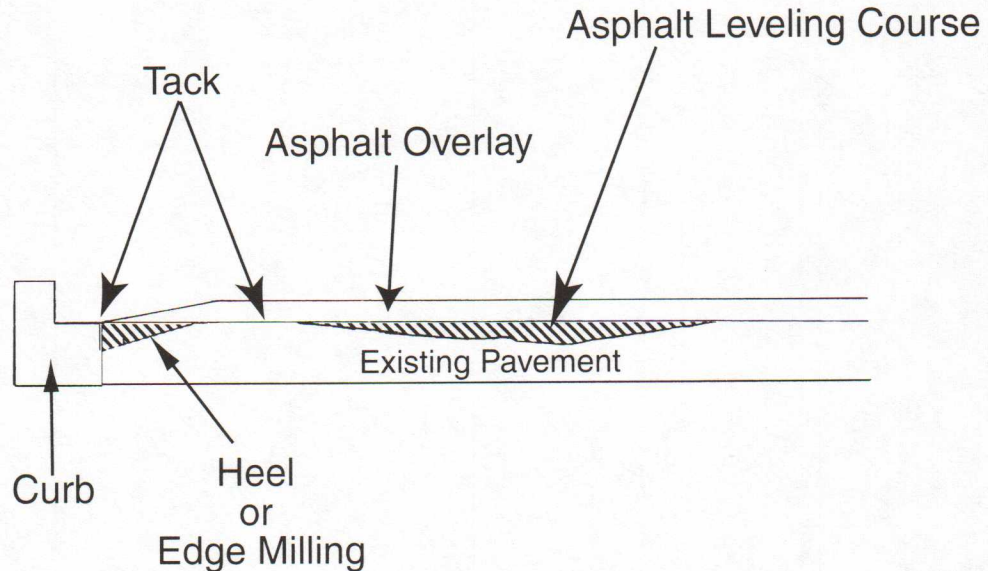

Asphalt Overlay

1. Cut a heel along the perimeter of areas to be resurfaced, so new asphalt will tie in flush with existing pavements.
2. Clean areas to be resurfaced.
3. Apply tack coat at a rate of .05 gallons per square yard.
4. Install asphalt leveling course as needed to bring low areas up to grade.
5. Install asphalt overlay at proposed thickness using self-propelled paving machine and compact to maximum density.
6. Traffic should remain off new pavement for at least 12 hours to allow for proper curing.