




ASPHALT AND CONCRETE • GENERAL CONTRACTORS

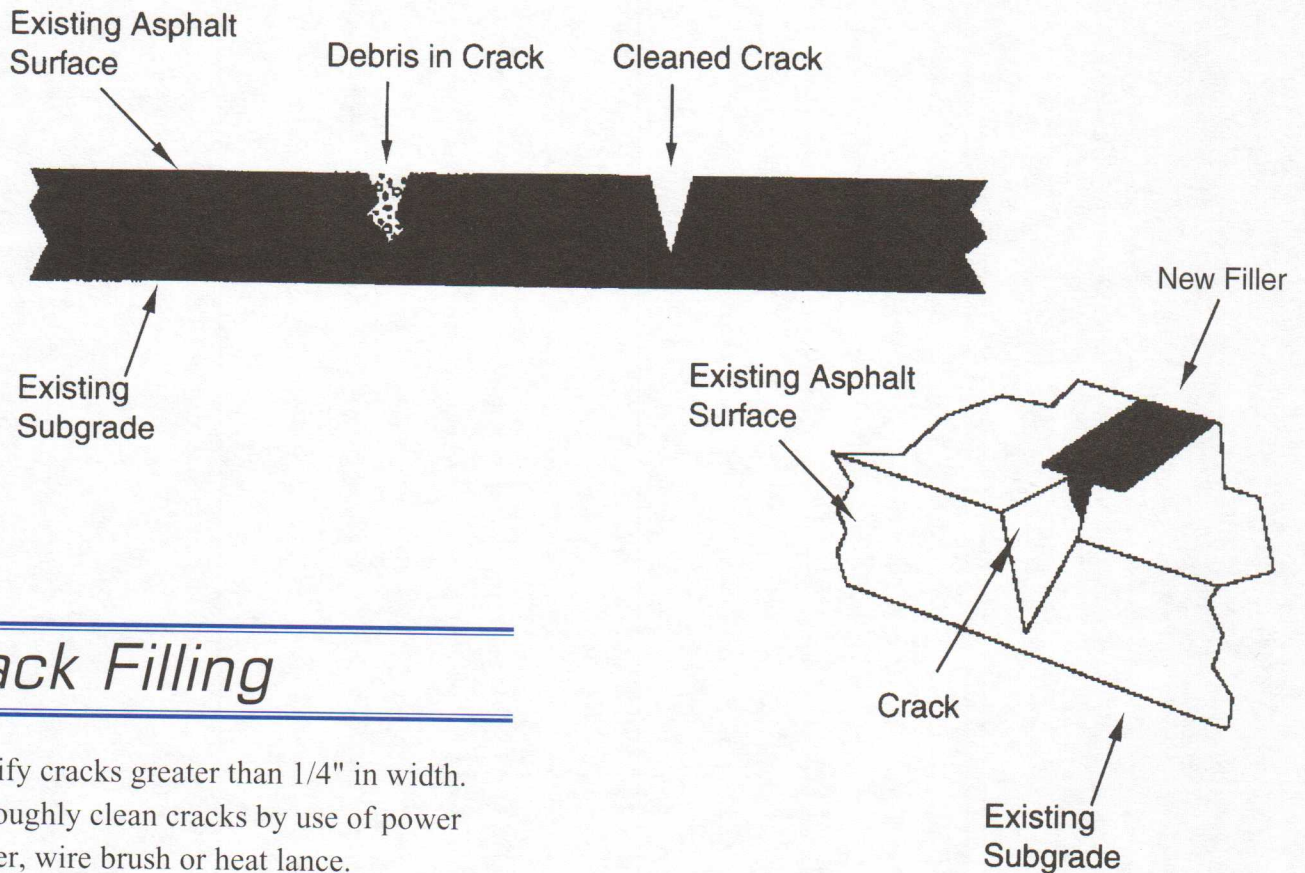

Crack Filling

1. Identify cracks greater than 1/4" in width.
2. Thoroughly clean cracks by use of power blower, wire brush or heat lance.
3. Install hot rubberized crack filler in cleaned cracks. A 1-1/2" crack filler band will be leveled on surface of cracks to prevent water penetration.