



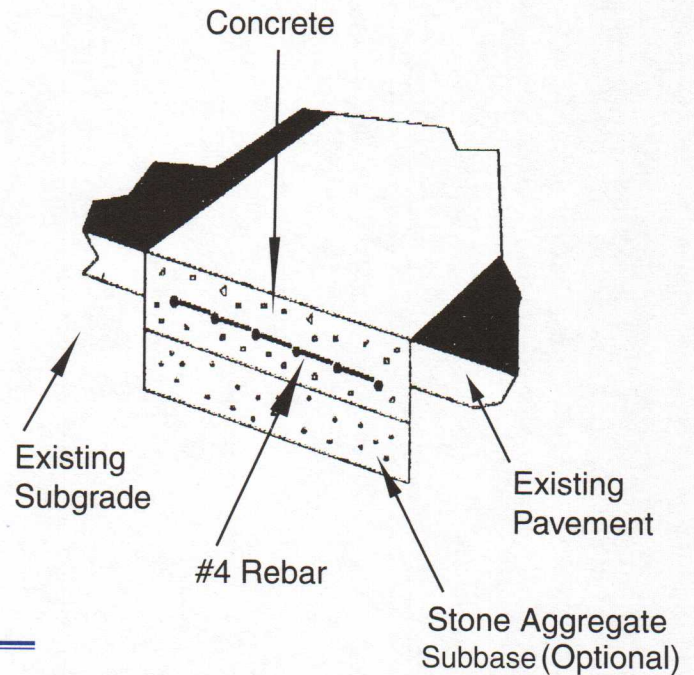

ASPHALT AND CONCRETE • GENERAL CONTRACTORS

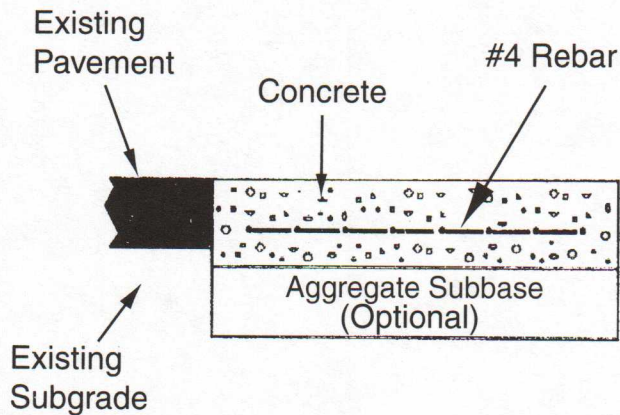

Dumpster Pads

1. Identify and mark area of new pads.
2. Saw cut the perimeter of each pad.
3. Excavate and dispose of existing debris (8" depth).
4. Compact subbase or subgrade to maximum density.
5. Install #4 Rebar @ 18" centers for reinforcement.
6. Install 3500 P.S.I. concrete to proposed thickness and rough broom finish to grade.
7. Traffic should remain off new concrete for a minimum of 5 days.